

# Air-Flexx<sup>®</sup>

## TRUCK TIRE VALVE EXTENSIONS

 
PN 20075, 20085, 20105, 20145, 20185, 20215, 20315, 20415, 21000




**CHECK AIR PRESSURE AT ANY TIME  
 WITHOUT REMOVING HUB CAPS FROM  
 SINGLE WHEELS!**

Air-Flexx valve extensions are flexible but rigid enough to eliminate the need for a rim holder, clamp or stabilizer during inflation, saving time and money. If the extension is severed or broken no pressure is lost from the tire. For use on spare wheels with angled extensions of 45°, 90°, 135° or 180°.

Item No.	Description
20075	2 <sup>1</sup> / <sub>8</sub> " (75mm) Air-Flexx Valve Extension, Steer and Single Wheels with Hubcaps
20085	3 <sup>1</sup> / <sub>8</sub> " (85mm) Air-Flexx Valve Extension, Steer and Single Wheels with Hubcaps
20105	4 <sup>1</sup> / <sub>8</sub> " (105mm) Air-Flexx Valve Extension, Inner Dual Tires or Steer & Single Wheels with Hubcaps
20145	5 <sup>1</sup> / <sub>8</sub> " (145mm) Air-Flexx Valve Extension, Inner Dual Tires
20185	7 <sup>1</sup> / <sub>4</sub> " (185mm) Air-Flexx Valve Extension, Inner Dual Tires
20215	8 <sup>1</sup> / <sub>8</sub> " (215mm) Air-Flexx Valve Extension, Inner Dual Tires
20315	12 <sup>3</sup> / <sub>8</sub> " (315mm) Air-Flexx Valve Extension, Inner Dual Tires or Spare Tire
20415	16 <sup>1</sup> / <sub>8</sub> " (412mm) Air-Flexx Valve Extension, Inner Dual Tires or Spare Tire
21000	39 <sup>3</sup> / <sub>8</sub> " (1000mm) Air-Flexx Valve Extension, Inner Dual Tires or Spare Tires

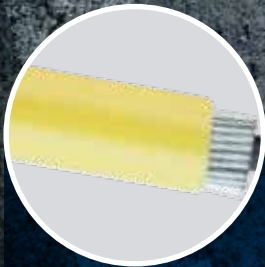

 
**PROTECTIVE  
 DURABLE PLASTIC  
 COVER STAYS  
 FLEXIBLE IN EXTREME  
 COLD AND HEAT**

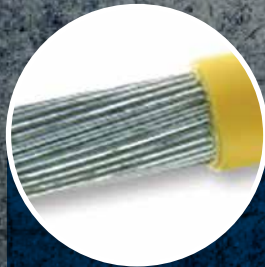

**STAINLESS STEEL  
 JACKET**



**INNER AIR PIPE**

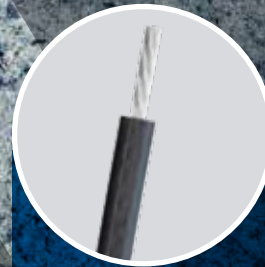 

**MOVING INNER  
 PIN OPENS TIRE  
 VALVE ONLY WHEN  
 CHECKING PRESSURE  
 OR INFLATING**

**www.KENTOOL.com**

**1-888-536-8665**

768 E. North Street, P.O. Box 9320 | Akron, Ohio 44305 | Fax: 800-872-4929 | Phone: 330-535-7177 | Fax: 330-535-1345 | E-mail: sales@kentool.com

© 2019 Ken-Tool. All Rights Reserved. KT112619