



WHEREVER TIRES ARE CHANGED™

*Operating Instruction
General Specification
Installation and Maintenance*



Premium Tire Inflator 26081

Premium Tire Inflator 26082



SEE OUR VIDEO DEMOS AT
WWW.KENTOOL.COM

www.KENTOOL.com

1-888-536-8665

© 2021 Ken-Tool. All Rights Reserved. | 768 E. North Street, P.O. Box 9320 | Akron, Ohio 44305
Fax: 800-872-4929 | Phone: 330-535-7177 | Fax: 330-535-1345 | E-mail: sales@kentool.com

26081, 26082 - rev. 2021-05-04

Operating Instructions

IMPORTANT



The tire inflator must only be connected to air supply systems with clean dry air. Any moisture in the air supply system may cause damage to the tire inflator and void warranty.

1. This gauge will automatically turn on when pressure is applied or by depressing the “ON/LIGHT/UNIT” button. It will automatically “turn off” after approximately 8 seconds without being used.
2. This tool will read air pressure in units of PSI, BAR or KPA. To change to preferred unit, press and hold “ON/LIGHT/UNIT” button. Gauge will toggle through each unit. Release button when desired unit is displayed.
3. Press handle fully to inflate. Release handle to middle position to bleed air from tire.

Replacing Batteries

This inflator requires two (2) AAA batteries. If the voltage of the batteries falls below 2.6V, the battery icon will flash continuously until it shuts down. The batteries must be changed if the battery icon flashes.



Unscrew the battery cap in a counterclockwise direction.



Slide the batteries into battery compartment with the positive end facing out.



Replace the battery cap carefully and do not over tighten.

*THIS INSTRUCTION MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
READ CAREFULLY AND UNDERSTAND ALL INFORMATION BEFORE OPERATING THIS TOOL!
SAVE THIS MANUAL FOR FUTURE REFERENCE.*