Ken-Tool®

WHEREVER TIRES ARE CHANGED™

PILOT SLEEVE™

POLYAMIDE WHEEL CENTERING SLEEVES

PN 30615, 30616, 30617, 30631, 30632, 30633, 30630

REALIGNING THE WHEEL TO THE TRUE CENTER OF THE HUB BEARING.

Over time, the pilots on the hub can lose tolerances originally intended from the factory, allowing an offset between the wheel and the hub bearing. Polyamide Wheel Centering Sleeves take up the gap between the 22mm stud and the 26mm wheel opening.

Pilot Sleeve™ Truck Wheel Centering Installation Guide

SOLD IN DIFFERENT SIZES AND QUANTITIES TO FIT YOUR NEEDS!

Item No.	Size	Description
30615	20mm	6 pc. Clamshell Pack
30616	20mm	100 pc. Bag
30617	20mm	1,000 pc. Bucket includes FREE Zip Tool
30631	22mm	6 pc. Clamshell Pack
30632	22mm	100 pc. Bag
30633	22mm	1,000 pc. Bucket includes FREE Zip Tool
30634		Pilot Sleeve Display
30630		Zip Tool *(REQUIRED for installation of Pilot Sleeves on INSIDE DUAL WHEELS)*

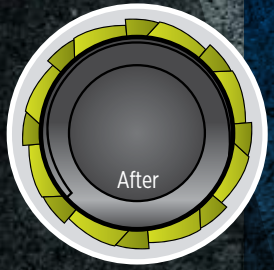

The Zip Tool works with both 20mm and 22mm sizes.

FREE ZIP TOOL (30630) WITH BUCKET OF 1000!
REQUIRED FOR INSTALLATION ON INSIDE DUAL WHEELS.

INSTALLATION: WITH THE INSTALLATION END OF THE ZIP TOOL, APPLY PRESSURE USING A CLOCKWISE, RATCHETING MOTION TO FULLY ENGAGE PILOT SLEEVE INTO THE WHEEL.

REMOVAL: WITH THE REMOVAL END OF THE ZIP TOOL, EASILY PUNCH LODGED PILOT SLEEVE FROM BACK SIDE OF WHEEL.

PILOT SLEEVE DISPLAY

30634 Holds 18 6pc clamshell packs.
Clamshell packs sold separately.

www.KENTOOL.com

1-888-536-8665

768 E. North Street, P.O. Box 9320 | Akron, Ohio 44305 | Fax: 800-872-4929 | Phone: 330-535-7177 | Fax: 330-535-1345 | E-mail: sales@kentool.com

© 2021 Ken-Tool. All Rights Reserved. KT043021